



Connect Door Station to Chime/Mechanical Doorbell

Title:	Connect Door Station to Chime / Mechanical Doorbell	Version:	v1.0	Date:	07/11/2023
Product:	Video Intercom Door Station		Page:	1 of 15	


Preparation

1. Make sure door station support mechanical doorbell
2. Prepare the suitable power supply/adaptor for mechanical doorbell
3. Here we take DS-KV8113-IME1(C) for example, for other models, the configuration and wiring are the same

Connect Door Station to Chime/Mechanical Doorbell

1. Wiring

Wire all the devices together according to below diagram. DO NOT power on before making sure the connections are correct.

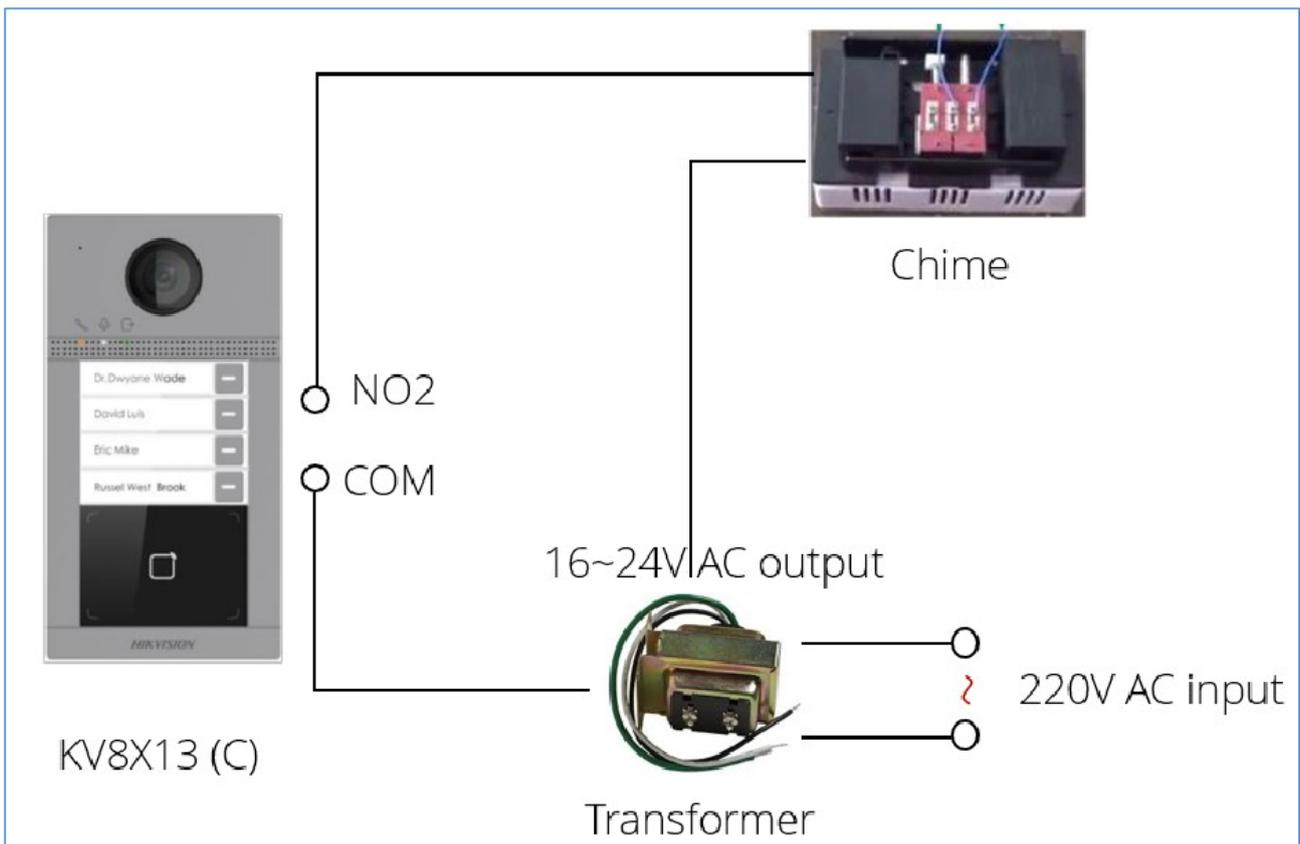

Note:


1. The chime, cable, transformer/adaptor should be prepared by yourself in advance.
2. The interface on door station may be different according to different device models. Some models use NO and COM, while others use NO2 and COM, for details please refer to the web page indication in Step2.

2. Configuration

Connect Door Station to Chime/Mechanical Doorbell


1) Change work mode.

Power on door station with POE switch or 12V DC adapter, then activate device and login the device web interface, go to *Intercom-I/O settings*, *I/O output No.* and select work mode as mechanical doorbell and save, device will reboot to take effect.

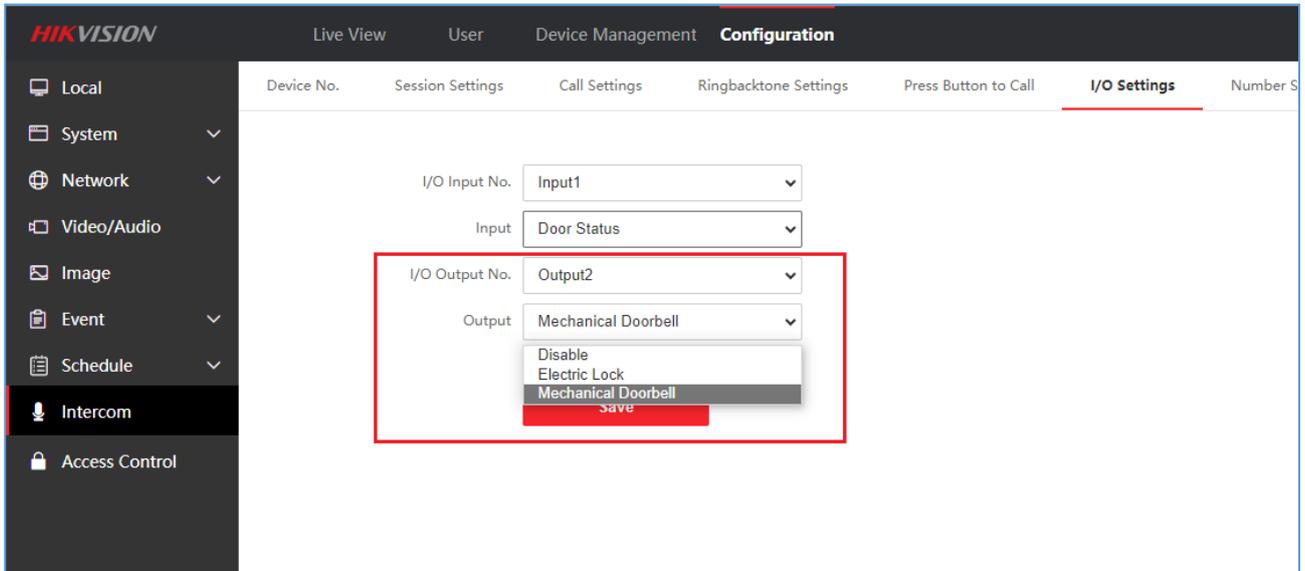

2) Link indoor station to door station

Make sure you can call indoor station from door station

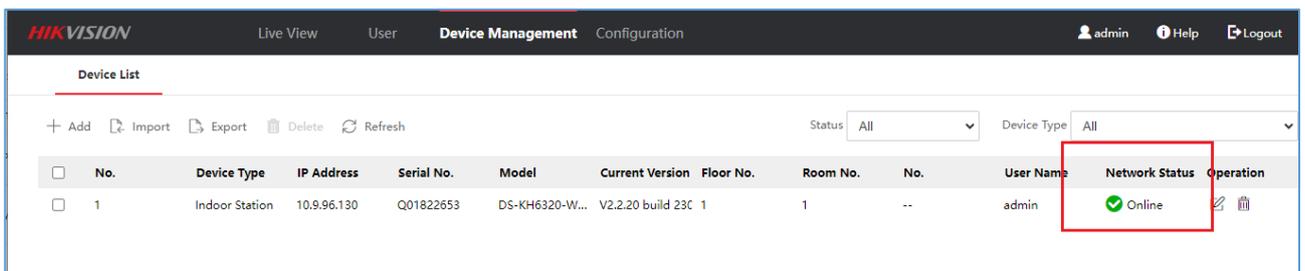

Note:

1. The indoor station is necessary, the chime will work when you can call indoor station, it will not work without indoor station.



See Far, Go Further