HIKVISION

Wireless Router

Quick Start Guide

Packing List
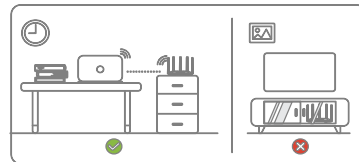
Router

Power Supply Adapter

Ethernet Cable

Quick Start Guide

Regulatory Compliance and Safety Information
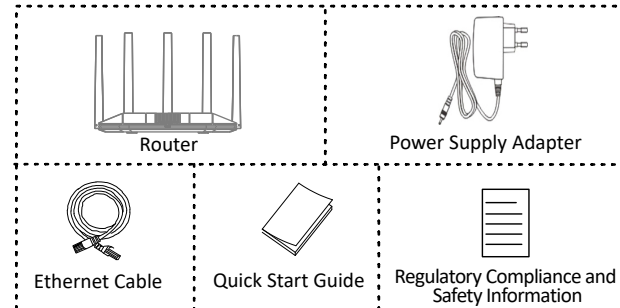
Place the Router

- The closer, the faster.
- Higher and no coverage.
- Place it on the centre to cover more space.

More Information

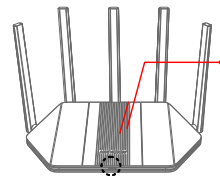Get more information about configuring the device by scanning the QR code beside or going to *https://enpinfodata.hikvision.com/ analysisQR/showQR/6854dd2c*

---

① Learn About Router

Descriptions about indicators and interfaces.

- ● Solid Blue:
  The Internet is accessible.
- ○ Flash Blue:
  Device pairing or restoring to defaults...
- ● Solid Red:
  Unactivated or the Internet is inaccessible;
  Or upgrading...
- ○ Flash Red:
  Device pairing or broadband migrating...

Self-Adaptive WAN/LAN

Connect to an uplink device (e.g. modem) or downlink devices (e.g. IPCs, PCs).

Long press for 1-3s:
- Password-free accessed by wireless devices;
- Mesh networking with Hikvision routers.
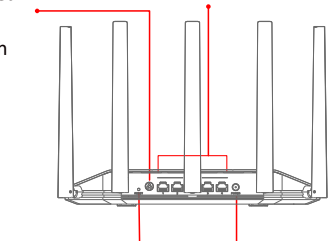
RESET
Long press for 8s:
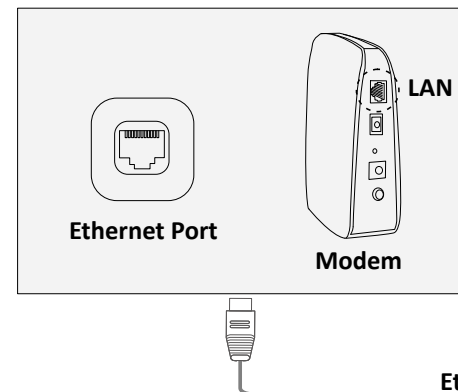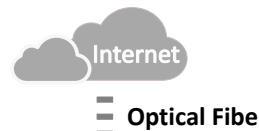- Restore to defaults.

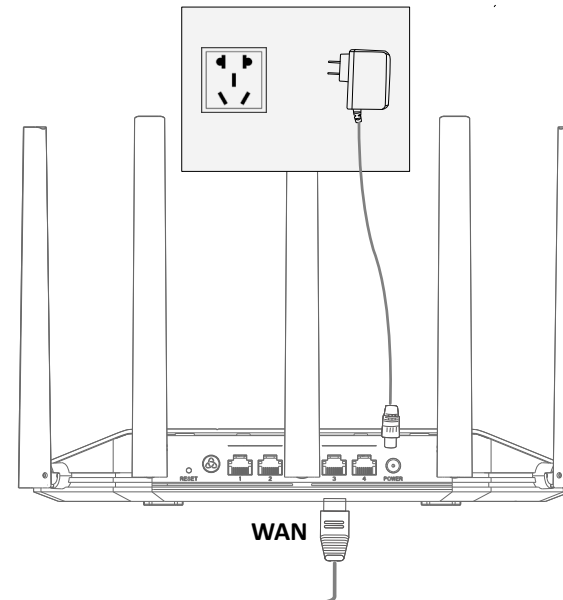**POWER**
Connect to the power supply adapter.

---

② Connect Power Supply and Internet

Refer to the figures below to complete wiring.

Connect to the Internet

Internet

≡ Optical Fiber

Ethernet Port

Modem

LAN

Ethernet Cable

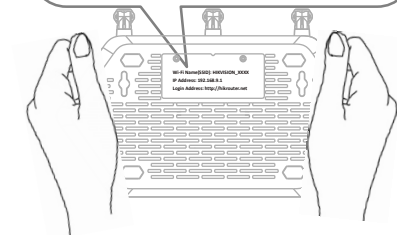### Connect to Power Supply

WAN

---

③ Activate Router

Follow these steps to complete the initial activation of the router.

Check the Label
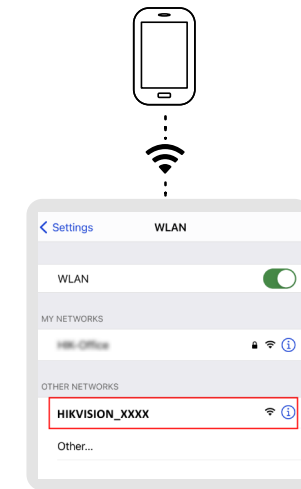
Obtain Wi-Fi name and IP address.

Wi-Fi Name(SSID): HIKVISION_XXXX
IP Address: 192.168.9.1
Login Address: http://hikrouter.net

Connect to a Wi-Fi Network

Connect your device to the Wi-Fi.

‹ Settings   WLAN

WLAN

MY NETWORKS

OTHER NETWORKS

HIKVISION_XXXX

Other...

Enter Activation Page

Automatically redirect to the page.

Select your Coutry/Region

Hello!
Welcome to Hikvision Router.
Complete the routing setup in 3 steps.

English

·Country/Region
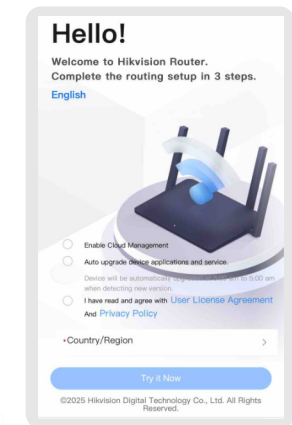
If not, you can manually enter IP address (**192.168.9.1**) or login address (**http://hikrouter.net**) in the browser.
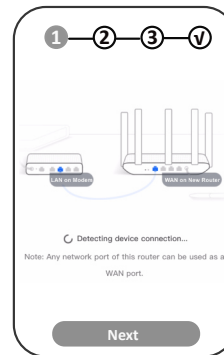
A. Create New Wi-Fi

Your router will work independently and create a new Wi-Fi network.

Start Initial Configuration → Completed
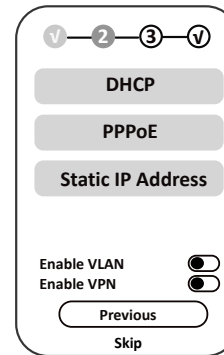
Select **Router Mode** and follow the steps below to complete the configuration.

Wi-Fi will restart.

1. Device Connection

Make sure the router is connected to the network.

Detecting device connection...

Note: Any network port of this router can be used as a WAN port.

Next

2. Network Config: Detect your network type or select manually.

DHCP
PPPoE
Static IP Address

Enable VLAN
Enable VPN

Previous
Skip

PPPoE

Broadband Account:
Broadband Password:

Enable VLAN
Enable VPN

Next
Previous

Static IP Address

IP Address:
Subnet Mask:
Gateway:
Preferred DNS:
Alternate DNS:

Enable VLAN
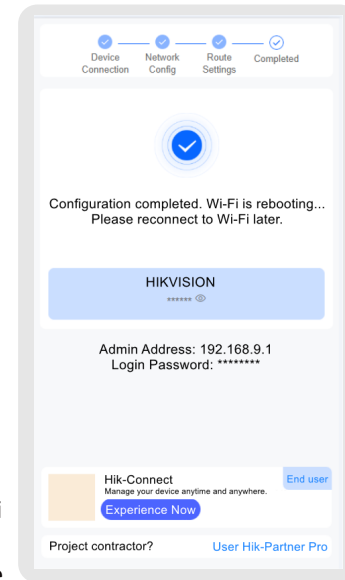Enable VPN

Next
Previous

- **DHCP** is recommended. No configure is required.
- Select **PPPoE** if your ISP has provided broadband account and password.
- **Static IP** is not recommended unless your ISP has provided an IP address and other information.

NOTE: Please check more information about VLAN and VPN on the User Manual.

3. Route Settings

Wi-Fi Name: HIKVISION_XXXX
Wi-Fi Password:
◯ Set Wi-Fi password as admin password.
Admin Password:
Country/Region:

Next
Previous
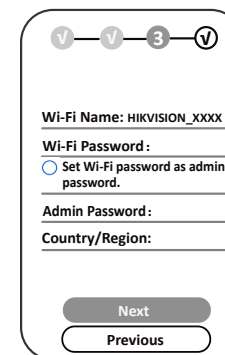
- Set Wi-Fi password
  -- For connecting the Wi-Fi
- Set Admin password
  -- For managing the device

Device Connection — Network Config — Route Settings — Completed

Configuration completed. Wi-Fi is rebooting...
Please reconnect to Wi-Fi later.

HIKVISION
••••••

Admin Address: 192.168.9.1
Login Password: ********

Hik-Connect
Manage your device anytime and anywhere.
Experience Now   End user

Project contractor?   User Hik-Partner Pro

B. Extend Wi-Fi Range by Mesh

Quick activate the sub router and expand Wi-Fi coverage of the main router.

ⓘ Please refer to the **More Information** and get methods for devices that do not support Mesh.

Ⓐ **Main Router**

Ⓑ **Sub Router**

【Before You Start】
- Ensure that both routers support Mesh.
- Ensure that **A** can access the Internet normally.
- Ensure that **B** is unactivated (long press the RESET button for 8s to restore if it has been activated).
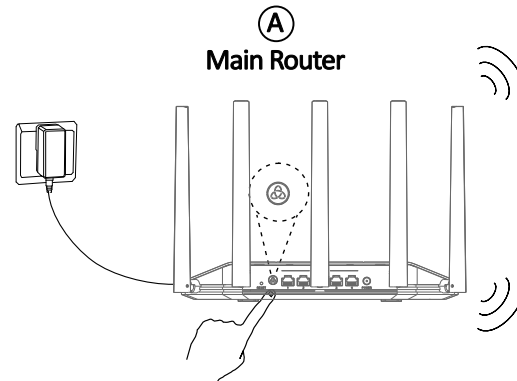
【Steps】
1. Power on **B** and place it near **A**. The indicator on **B** is solid red.
2. Press the ⊚ buttons on both **A** and **B** for 1-3 seconds. Wait until the indicator on **B** is solid blue.
3. Disconnect the power supply on **B**, and place it in the location where Wi-Fi coverage needs to be expanded.
4. Reconnect **B** to the power supply. Wait until the indicator on **B** is solid blue again.
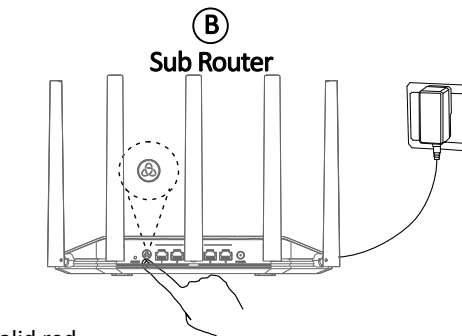
【Note】
- The Wi-Fi names and passwords of A and B are the same.
- If step 2 is failed, try to connect a LAN port of **A** and the WAN port of **B** by an Ethernet cable, and repeat the next steps after the indicator on **B** is solid blue.
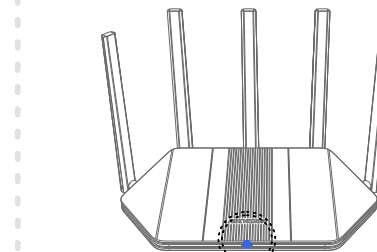

ⓘ **The Indicator is Solid BLUE**

Reconnect to the Wi-Fi after status checking.

Enjoy fast and smooth surfing !

Manage Your Router Anytime, Anywhere

1. Download Apps

Scan the QR code below to download the apps. Both the apps can help you manage your device remotely.

HiK-Connect (For End User)
HiK-Partner Pro (For Partner)

2. Open an App and Login

Create a new account to login if you don't have one before.

3. Add Device

Scan the QR code on the lable of the router, and follow the steps on the APP to complete the setup.

See Far, Go Further

UD36664B-B